

AQUASTAR[®]

Electric Two-Zone Water Timer

Battery Installation

Open the battery cover on the lower back of the timer. Pull out the black battery holder and insert four AA batteries (not included). Push the battery back into the unit.

Set Current Time

- Use the "+" button to increase time displayed.
 - Use the "-" button to decrease time displayed.
 - Make sure that correct AM/PM is displayed.
- TIP : Holding "+" or "-" button down allows you to scroll or more quickly through your time selection.

Programming the Timer

1. Set watering frequency.
Use the "▲" button to set up water frequency. You may set up 1st (once a day), 2nd (once every two days), 3rd (once every three days)...7th (once a week).
2. Selecting water cycle on dial.
Turn the dial to select one of the 12 settings you wish to run : water at 6 AM for 15, 30 or 60 minutes; water at 6 AM and 6 PM for 15, 30 or 60 minutes; water at 7 AM for 15, 30 or 60 minutes; and water at 7 AM and 7 PM for 15, 30 or 60 minutes.

Installing the Timer

Attach timer to faucet and hose. Open the faucet and leave it open. Water will come on and shut-off at the selected time.

Manual Operation

To water for non-timed application, with the water turned on at the faucet, turn the dial to ON. Turn the dial to OFF to stop manual watering.

FOR NON-COMMERCIAL USE ONLY

CAUTION : Detach from faucet during freezing weather. This product intended for outdoor watering use only. Do not use water exceeding 100°F(38° C) or with pressures exceeding 100 psi.

